



ARROWHEAD
R O C K D R I L L



S90
Hydraulic Hammer
Parts Manual




ARROWHEAD
ROCK DRILL

S90 PARTS LIST

Diagram Number	Part Number	Description	Quantity
1	1081301	Moil Point	1
2	1081113	Combination Bush	1
3	1011101	Combination Bush Dowel Pin	2
4	1011215	Lower Cylinder Dowel Pin	2
5	1081102	Chuck Housing	1
6	1081311	Tool Retainer	1
7	1011104	Grease Nipple	1
8	1081106	Lower Cylinder Liner	1
9	1081101	Main Body	1
10	1081104	Piston	1
11	1081105	Upper Cylinder Liner	1
12	1081107	Disc Spring Washer	2
13	1081108	Spacer	1
14	1081109	Tie Rod	1
15	1081103	Cylinder Head	1
16	1081111	Tie Rod Washer	8
17	1081110	Tie Rod Full Nut	4
18	1081116	Tie Rod Half Nut	4
19	1011215	Valve Dowel Pin	2
20	1081401	Seal Kit	1
21	1011105	Gas Valve Assembly	1
22	1011202	Valve Plate Bolts	8
23	1081202	Valve Bottom Plate	1
24	1081201	Valve Housing	1
25	1081204	Valve Spool	1
26	1081205	Plunger	2
27	1081203	Valve Top Plate	1
28	1011213	Pressure Plug	1
29	1011220	Valve to Body Bolts	12
30	1011307	Hose Adaptors	2
31	1011214	Valve Housing Pressure Plug	1
32	1081302	Chisel	1
33	1081303	Blunt	1
34	1011208	Stopper Plate Bolts	1
35	1081315	Stopper Plate	1
36	1081309	Hammer Box	1
37	1081313	Decal Set	1
38	1081310	Lower Buffer	1
39	1081314	Upper Buffer	1
40	1081312	Top Bracket	1
41	1011365	Top Bracket Bolts	14
42	1011324	Outlet Pressure Hose	1
43	1011325	Inlet Pressure Hose	1
44	1011112	Gas Valve Spring	1
45	1011111	Gas Valve Shuttle	1
46	1011110	Gas Valve Small O Ring	1
47	1011109	Gas Valve Large O Ring	2
48	1011108	Gas Valve Dowty Washer	1
49	1011107	Gas Valve Body	1
50	1011106	Gas Valve Dust Cap	1




ARROWHEAD
ROCK DRILL

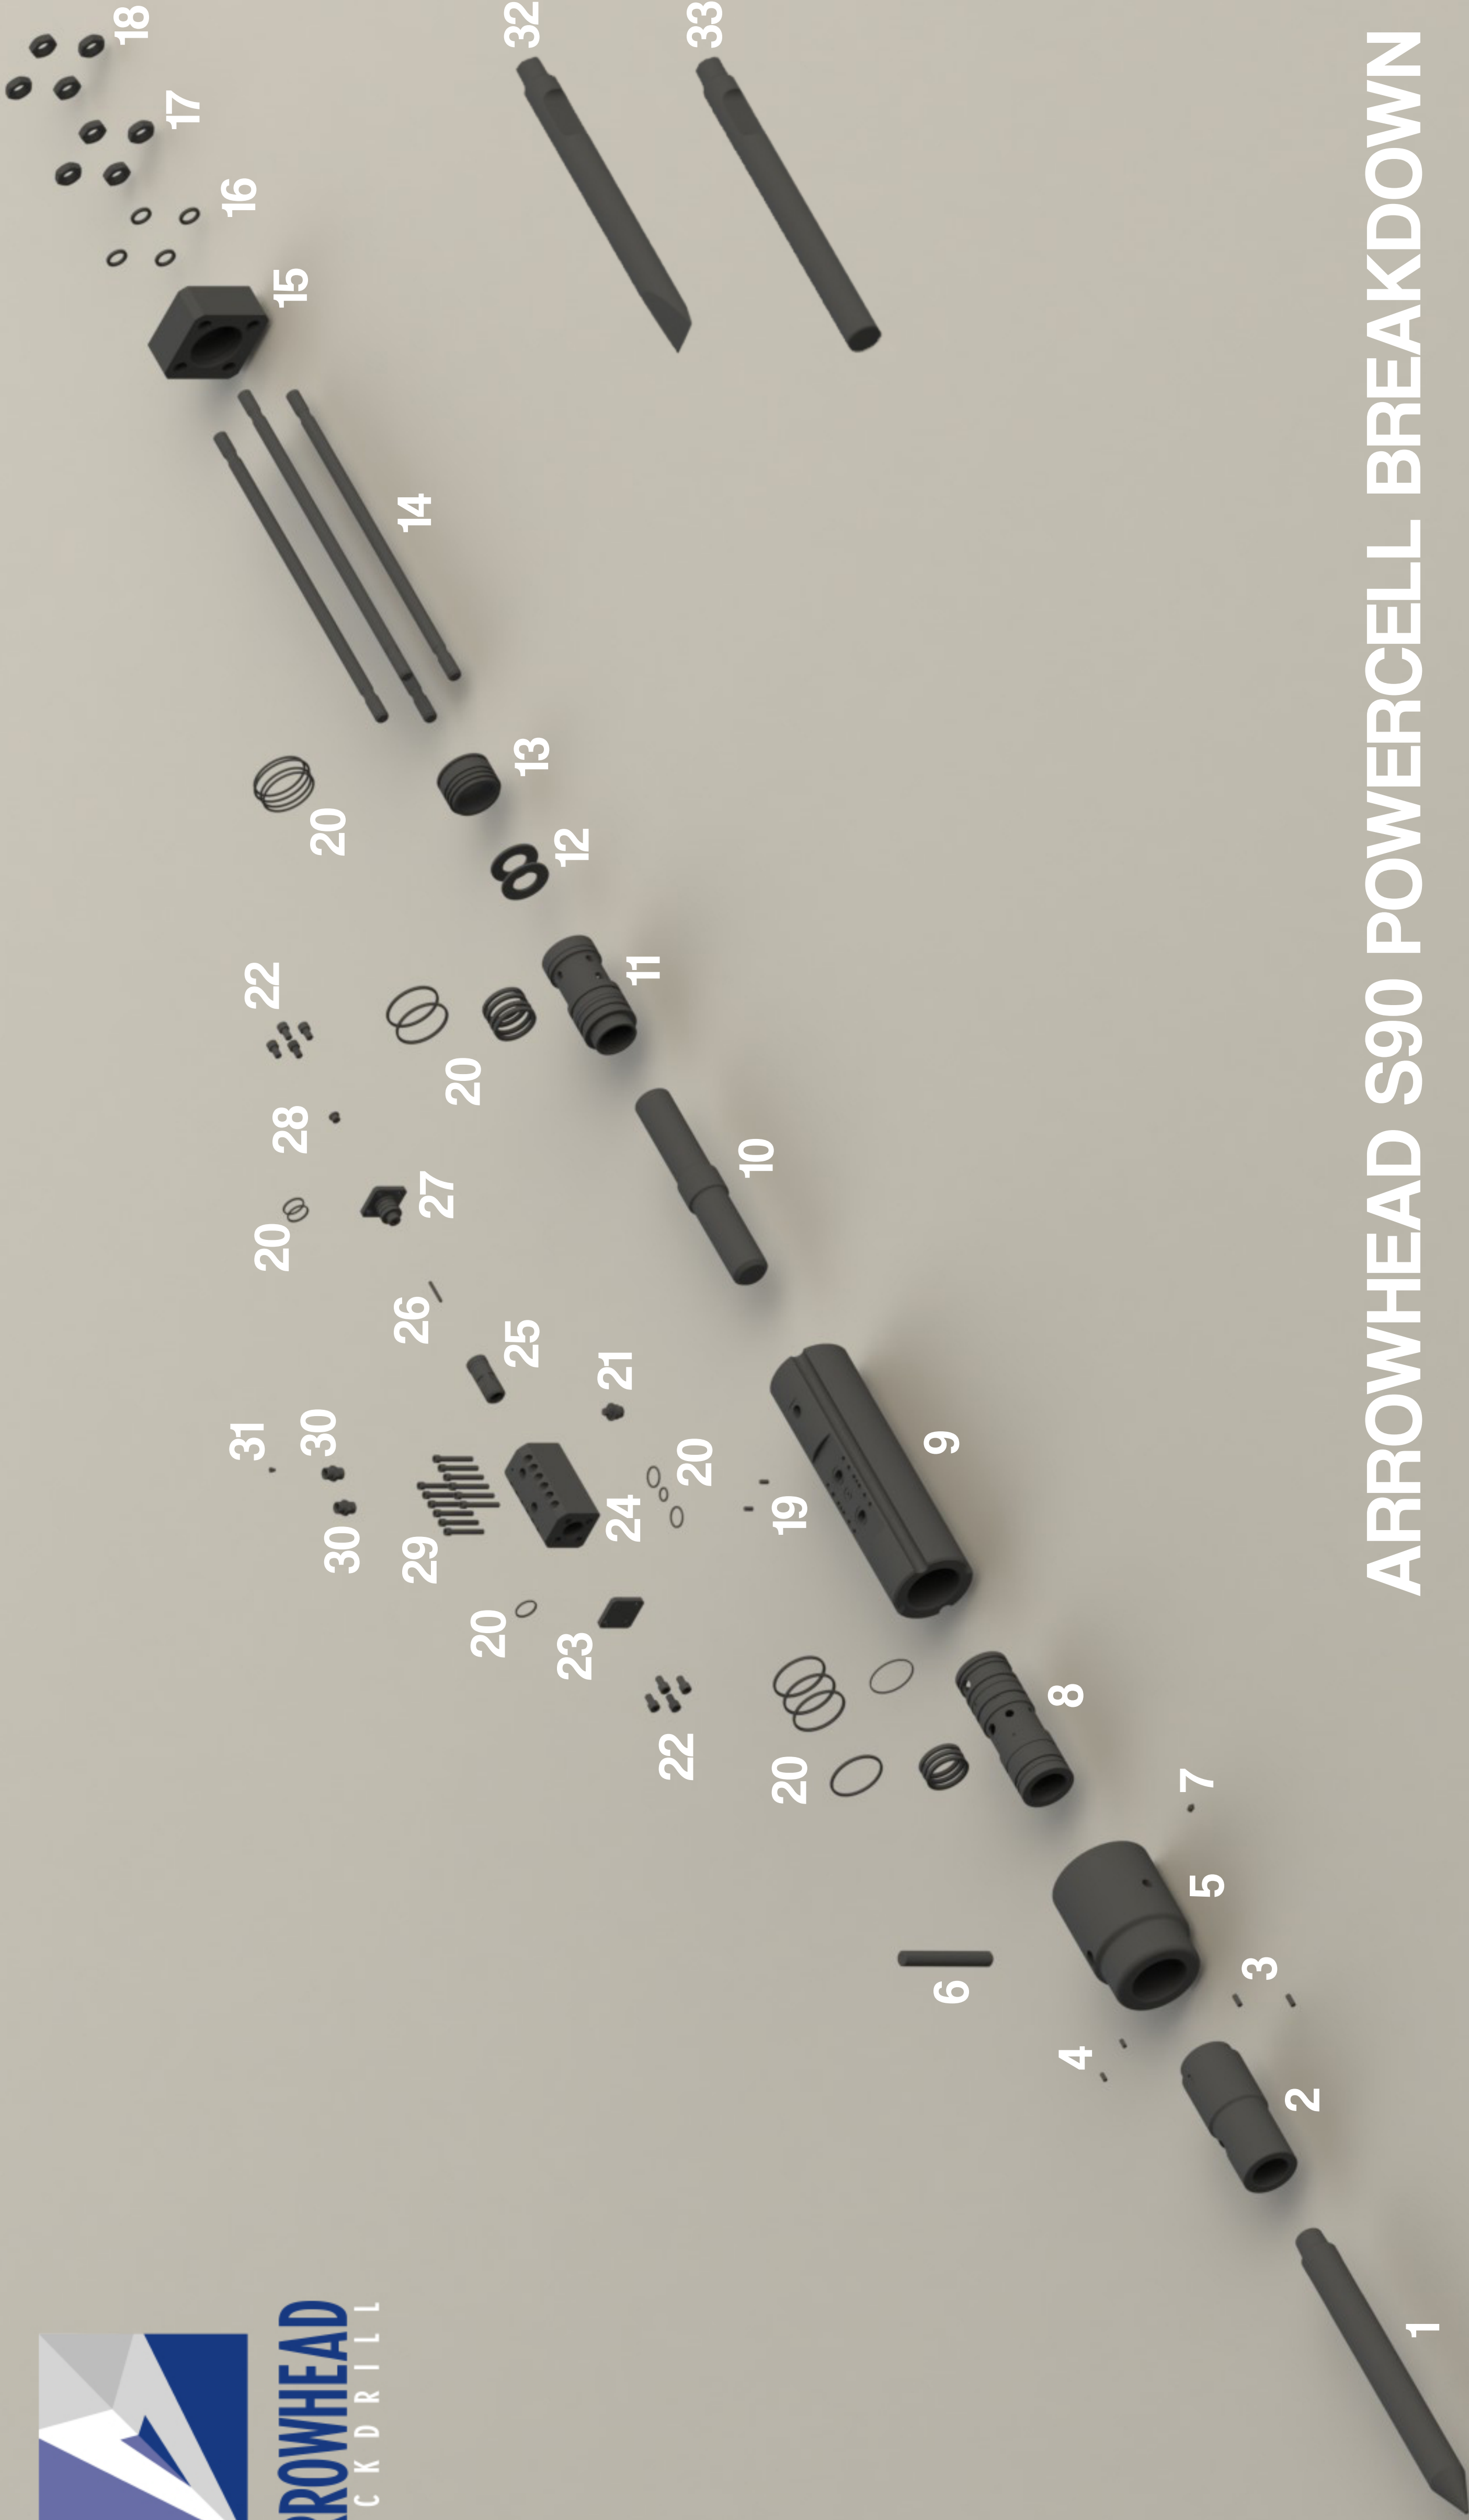


ARROWHEAD S90 POWERCELL BREAKDOWN




ARROWHEAD
ROCK DRILL

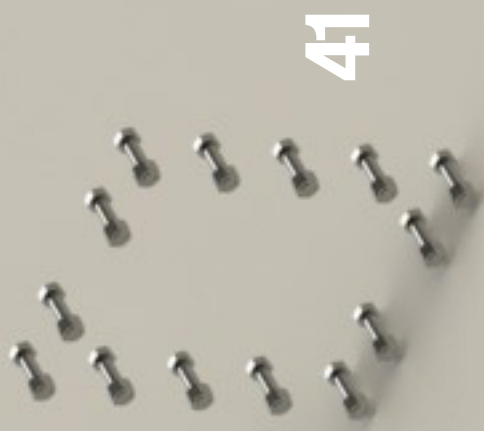

41

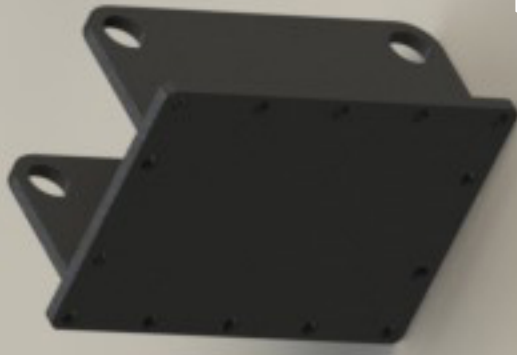

40

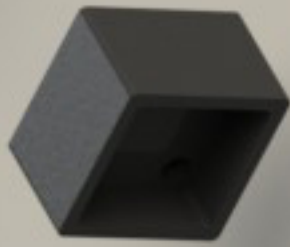

39



43

42



38

34



35



36


37

(Decal)

ARROWHEAD S90 HAMMER BREAKDOWN



ARROWHEAD
ROCK DRILL

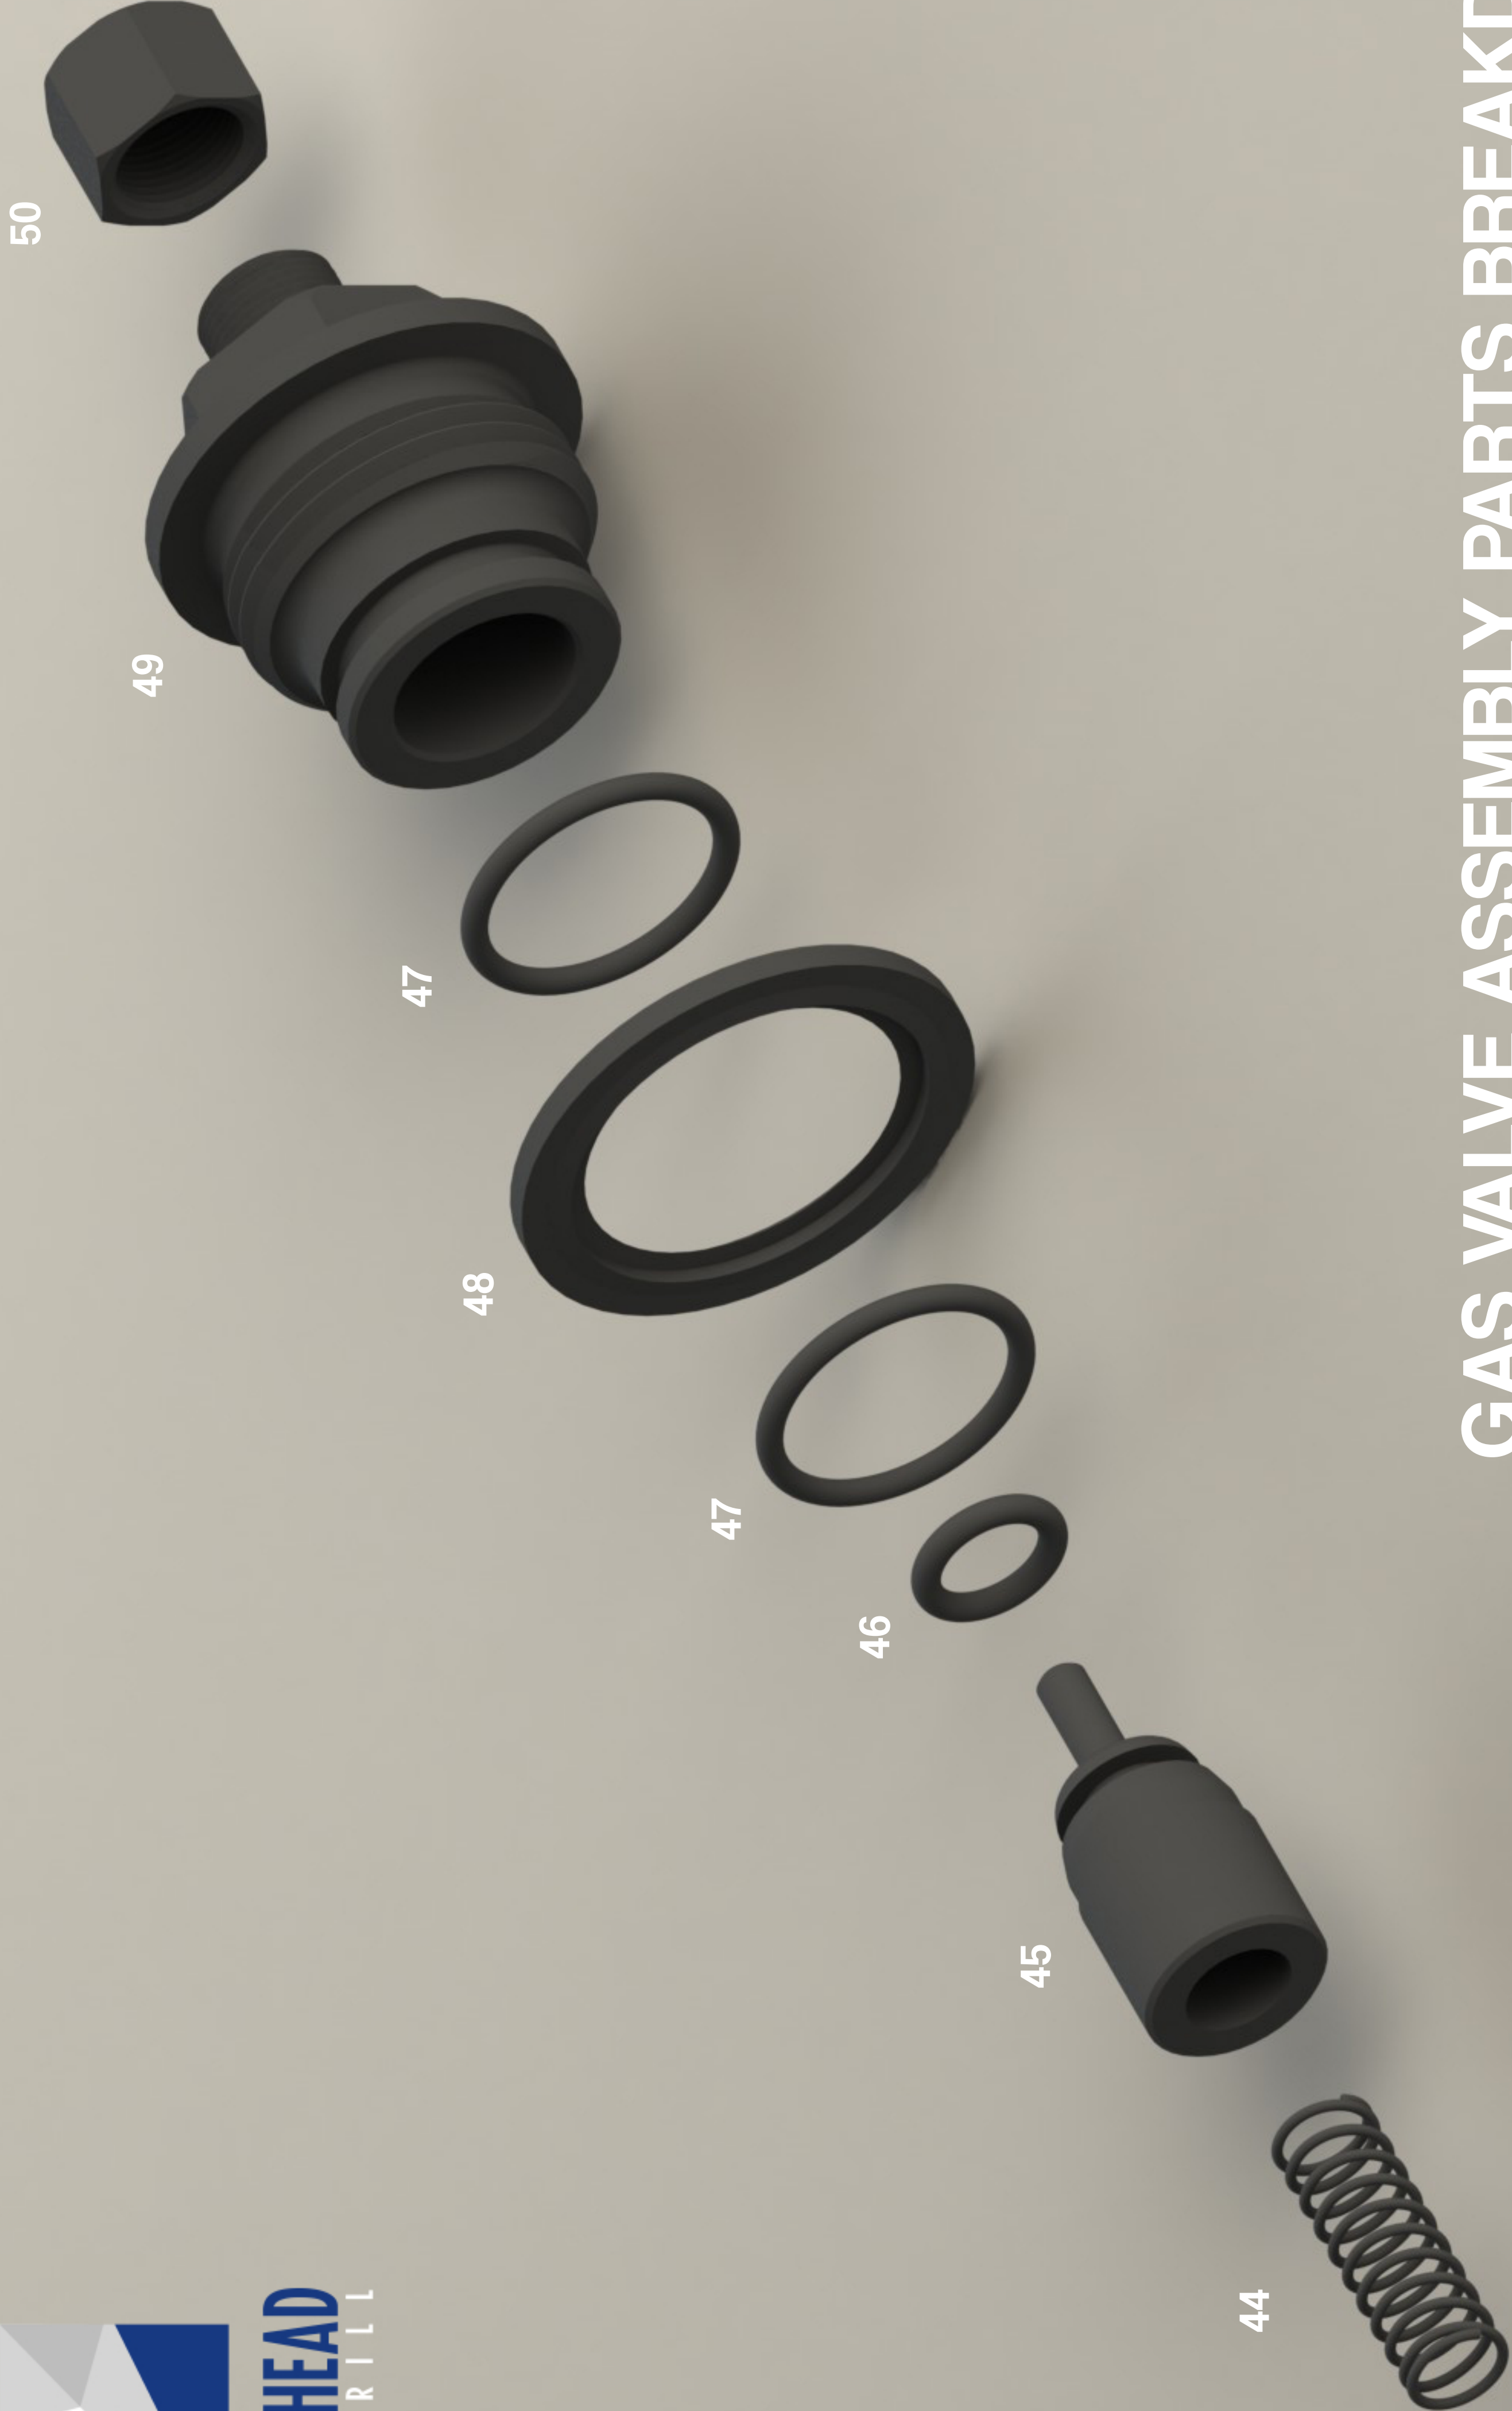

GAS VALVE ASSEMBLY PARTS BREAKDOWN